


Easy selection guide for P/T

Number of teeth per inch (tpi) for profiles and tubes

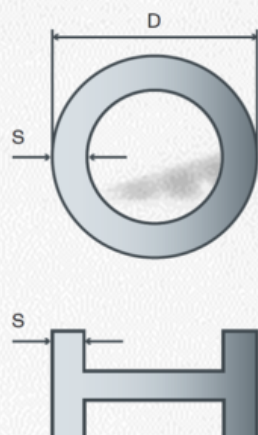

D mm	20	40	60	80	100	150	200	300	400	500	> 700
S mm	teeth per inch (tpi)										
2	14	14	14	14	10/14	10/14	10/14	10/14	8/12	8/12	6/10
3	14	10/14	10/14	8/12	8/12	8/12	6/10	6/10	6/10	6/10	6/10
4	14	10/14	10/14	8/12	8/12	6/10	6/10	5/8	5/8	4/6	4/6
5	14	10/14	10/14	8/12	6/10	6/10	5/8	4/6	4/6	4/6	4/6
6	14	10/14	8/12	8/12	6/10	5/8	5/8	4/6	4/6	4/6	4/6
8	14	8/12	6/10	6/10	6/10	5/8	5/8	4/6	4/6	4/6	4/6
10		6/10	6/10	5/8	5/8	4/6	4/6	4/6	4/6	3/4	3/4
12		6/10	5/8	4/6	4/6	4/6	4/6	3/4	3/4	3/4	3/4
15				4/6	4/6	3/4	3/4	3/4	3/4	2/3	2/3
20				4/6	4/6	3/4	3/4	3/4	3/4	2/3	2/3
30				3/4	3/4	3/4	2/3	2/3	2/3	2/3	1,4/2
50						2/3	2/3	2/3	2/3	1,4/2	1,4/2
80							2/3	1,4/2	1,4/2	1,4/2	1/1,3
100								1,4/2	1,4/2	1/1,3	0,75/1,25
150										0,75/1,25	0,75/1,25
> 250										0,75/1,25	0,75/1,25

When cutting layers: (as a guideline)

Measure D (layer) = Measure D (single rod) x Number of rods

Example: Pipe Ø 60 mm; s = 5 mm; 5 pieces in a layer

One rod results in 10/14 tpi → Five rods results in 4/6 tpi